

## INSTALLATION INSTRUCTION

## SIDE STEPS ALUMINIUM



**PICKUPATTITUDE.COM**

**QUESTIONS BEFORE INSTALLATION ?**



**CONTACT@PICKUPATTITUDE.COM**

**+33 4 94 00 37 00**



N° SIRET : 492 664 172 00029




**T6**

Fitted Volkswagen T6  
2015-2019

Fitting time: 50 min



ser.nr:

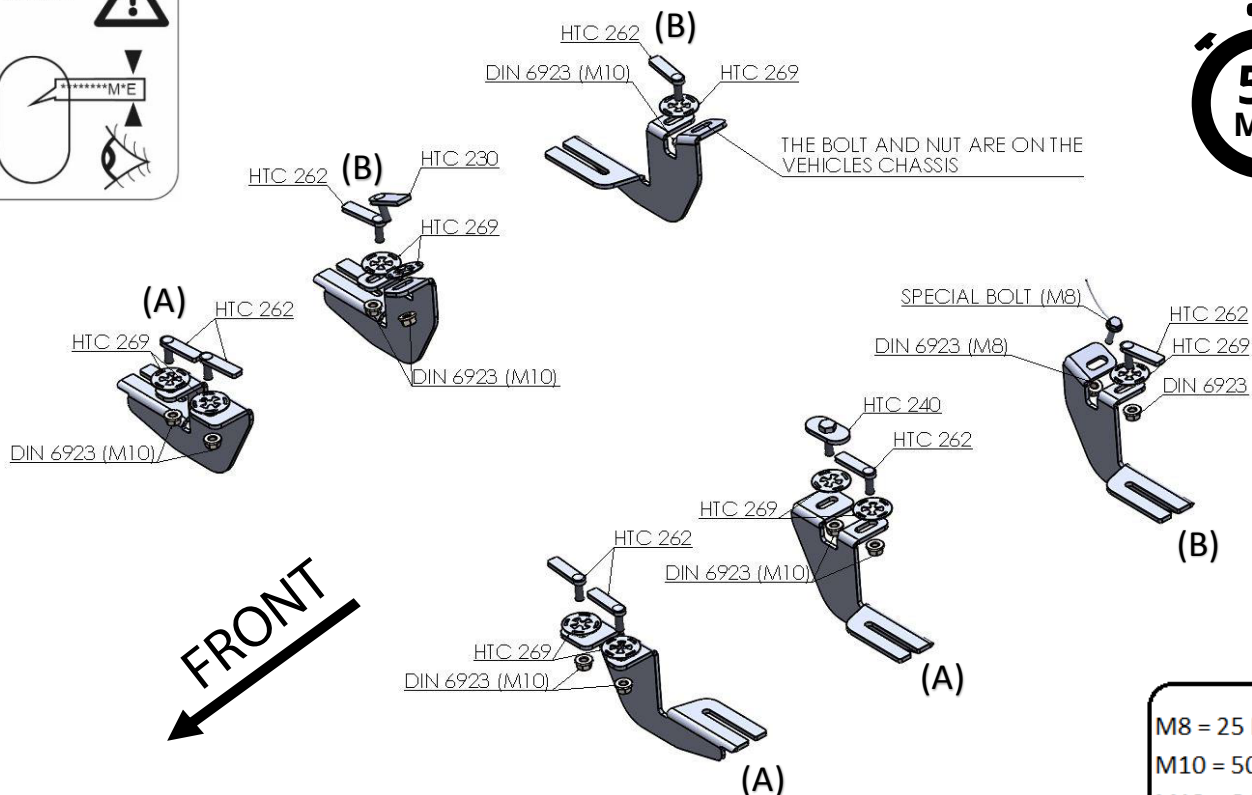

## HARDWARE

|    |  |                              |    |  |                               |   |  |                               |
|----|--|------------------------------|----|--|-------------------------------|---|--|-------------------------------|
| 1  |  | SPECIAL BOLT<br>(M8)         | 8  |  | HTC 262 - M10x30<br>(4x15x60) | 1 |  | HTC 240 - M10x30<br>(5x34x60) |
| 10 |  | FLANGE NUT<br>DIN 6923 (M10) | 10 |  | HTC 269 CLIPS<br>(M10)        | 1 |  | FLANGE NUT<br>DIN 6923 (M8)   |
|    |  |                              | 1  |  | HTC 230 - M10x25<br>(4x20x60) |   |  |                               |

## BRACKETS

